

## **Bass Care Instructions**

**Allegro (A) (SB) ~ Mini Allegro ~~ ST ~ T ~ Flip Series basses**

### **Piezo Bridge:**

Multi transducer Bridge w/3 band EQ  
Bullet pickup w/3 band EQ  
Upgrade-Multi Trans. Bridge  
(NEVER REDRESS TOP OF BRIDGE)

### **Trim Pots:**

One turn Trim Pots  
Each string can be individually balanced  
Clockwise increases volume (STOP 1:00)  
Counter clockwise decreases volume (STOP 4:00)  
(DO NOT FORCE beyond these points, this will  
DAMAGE Trim Pots.  
(Use small screwdriver)

### **Buffer Settings**

With the Bass laying on it's side... neck on left end pin on right... back facing you,  
Look very close at the Trim Pots the center has a small arrow head.

(( Individual Trim pot arrow should be set no higher than 9:00 ))

(( Master vol. should be set no higher than 6:00 ))

If set at full range ---- bass will distort. The higher the settings the chance is greater to distort.

Pre Amp is very powerful and will over drive the system.

(This should be done only to balance the string volume not to increase overall Volume of instrument ---- that should be done at the Amp.)

If one string is louder than the others you can set it lower ----- or bring the others higher to balance.

Note: When Battery is low this also will cause distortion.

### **Detachable Neck:**

(For long distance travel)

To Remove Neck:

1. Lay bass on its side
2. Wrap strings right below nut with Velcro
3. Loosen Strings
4. Insert Alan wrench & turn counter clockwise
5. Unhook strings from tailpiece, loop & Velcro

To Reassemble, Reverse Procedure

**Action Adjustment:**

(To change Action of Strings)

Should be NO separation between  
heel of neck & body slot

Insert Alan Wrench

1. For LOW action:

Loosen TOP screw 1/4 turn  
turn bottom screw clockwise  
for desired action

2. For HIGH action:

Turn BOTTOM screw counter clockwise

3. SNUG TOP screw

**Tummy Rest:**

Turn RIGHT to TIGHTEN

Turn LEFT to LOOSEN

**End pin:**

Adjustable up to 24"

Longer on Mini Allegro

**Battery:**

(Battery should last up to 600 hrs.)

1. To save battery disengage jack when not in use

2. If bass begins to distort, replace battery

**Controls:**

Master Volume

Treble - cut and boost

Mid Range - cut and boost

Bass - cut and boost

**Gig Bag:**

(To avoid DAMAGE, please observe  
how the bass is packed in bag)

1. Lay the body in Gig Bag with bridge  
facing zipper part of bag.

2. Fingerboard should face body  
with padded separator in between

(T Basses only)